# **4K Tablet Monitor**

# **Operation Manual**



## Menu


Product Overview 4
Product Recognition 5,6
Button Operation 7
Touch Screen 8-10
System Setting11,12
RoadCam App13
APP Monitoring Interface14
Charge/ Firmware upgrade/Attention15
Data Port Pin Definition16
Specifications17,18
RoadCam App Download19

- 3 -

#### **Product Overview**


The 4K HD Touch Tablet Monitor can take up to 12 MP photos and 4k videos, support AHD & CVBS video input. Audio and video synchronization. The user can operate it through screen touch or body buttons. This monitor adopts a 10.1-inch HD touch screen and a waterproof & dust-proof design. 4 protective corners can properly protect machine. Adjustable neck strap design is easy to carry. In addition, the battery can be disassembled to support separate charging. It can work with a wide range of remote cameras with customization functions (like 360° PT, GPS coordinates, zoom, measure). It is convenient to use in different fields.



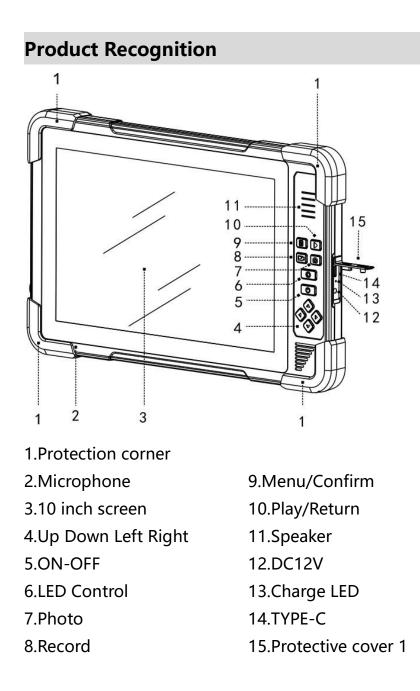



## **Product Recognition**

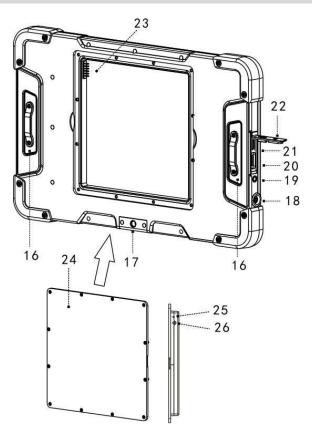

- 6 -

16.Rope buckle17.1/4 inch screw18.Cam Connector19.Headset20.Micro SD Card21.HDMI Output

- 22.Protective cover 223. Battery Connector24.Battery box25.Charging indicator
- 26. Battery box DC12V

## **Button Operation**

## • 🙂 ON-OFF

Press briefly to power on. Press it for 3s to power off. If crash, press it for 10s to power off and reset.

## • 🖸 Photo

Press it, flashes once and get a photo.

## Record

Press it to record, and the icon turns blue. The video timer starts. Press again to end it.

### Playback/Return

Press it to enter review photos and videos.

Press Up-Down-Left-Right to select.

Press 🗉 to confirm. Press ▶ Play again to exit When record, press ▶ to pause and stop timing;

press **b** again to restore.

## • 🐺 LED Control


Press it to ON/OFF/ Adjust cam' s LED brightness.

## • 🗏 Menu/Confirm

Press it to enter menu. Press Up-Down-Left-Right to select. Press 🖹 to confirm. Press ▶ Play to exit.

- 7 -

## **Touch Screen**

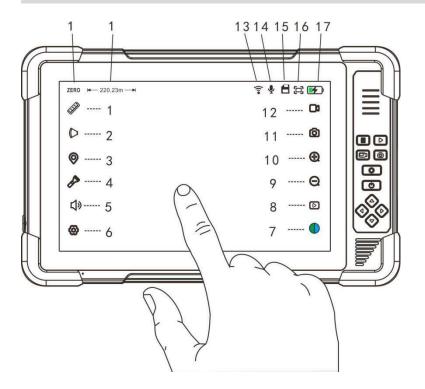

**1. Range Measurement**(*Additional purchase our range camera*)

✓ Open the function to show and record the range.
✓ 99.80m →: Show the camera's forward distance.

ZERO: Clear the current distance and recalculate it. 2. Lens Zooming(*Additional purchase our zoom camera*)

C: Move slider to zoom the lens of remote camera.

- 8 -

### **Touch Screen**

#### 2. Mark

 $\bigcirc$ : Pop up keyboard to input mark, which will display in the lower left corner. Touch it to revise or delete.

#### 4. LED Brightness Control

: Move the slider to control cam' s LED brightness.

#### 5. Speaker Volume Control

 $\checkmark$  Move the slider to control the speaker volume.

#### 6. System Setup

O: Touch this to enter into system setup.

### 7. Display Parameter Adjustment.

lacksquare : Move the sliding block to adjust the parameter.



#### 8, Play

Play photo & video. Touch 🖸 to lock the

important ones in case error deletion. Touch again to unlock it.

#### 9. Zoom out

 $\bigcirc$ : Touch this to zoom out the screen.

- 9 -

## **Touch Screen**

#### 10. Zoom in

: Touch this to zoom in the screen.

#### 11. Photo

O: Touch to take photo and screen flashes once.

## 12. Reco

Touch it, the icon turns blue, and the video timer starts; touch it again to end.

#### 13. WiFi

竉 : WiFi is on; if crossed, WiFi is off.

### 14. Mic



. Mic. is on. If crossed, Mic. is off.

## 15. Micro SD card

**e**: Card is ok. If crossed, abnormal or no card.

#### 16. Icon Switching of Image Display Scale

Press **D**: Image displays 4: 3

Press : Image displays 16: 9

#### 17. Battery power

Display battery power: the lighting

shows it's charging.

- 10 -

System Set	un			
System Set	чр			
Language	الله Mic	Brightness	Screensaver	<b>D</b> ∎/ Mirror
Camera	Record	Loop Time	Photo	Clock .
Baseline	Device Info	(interview) Wifi Switch	Format	Return
Language	Show t	he availabl	e language	s: Chinese,
	Traditional Chinese, English, French,			
		n, Russian,	•	
Mic.		to turn the	•	
Brightness	Touch to set the screen brightness.			
Screensaver		n to set the		
Mirror	Touch to set: normal display; flip			
	horizontal; flip vertical; flip			
_		horizontal &		
Camera	Touch to set camera input resolution.			
	of the	ing to the re known Al : Auto 2K,	HD camera	i, you can
		r will rese		•
Record	Touch to	set resolut	tion of reco	rding.

- 11 -

#### System Setup

- **Loop Time** Touch to set the time of recycle recording: 1s, 2s, 3s, 5s 10s, off. If choose 'off', recording will end until the micro SD card is full.
- **Photo** Touch to set the size of photo: 1.2 mega pixels, 8 mega pixels, 4 mega pixels, 2 mega pixels.

**Clock** Touch to set the system date & time.

**Baseline** Touch to set the types of baseline: off; cross; ruler; roundel.

**Device Info.** About, Reset and Password Switch About: Includes Wifi name and password, memory size of micro SD card, firmware version.

Reset: It can delete all the settings and restore to factory state and restart. Password Switch: Switch off, it directly enters working state upon startup; switch on, it needs to enter a password to start working. The default startup password is 8888.

WiFi Switch Touch to switch Wifi on or off.

- **Format** Touch and check format micro SD card. Format will delete all the data in micro SD card. Be sure to do a good job of data backup.
- **Return** Touch it to return and exit system setting.

- 12 -


## RoadCam APP



Before run RoadCam App, turn on the Wifi of the monitor first. Find the SSID name and password in "About" . Then add the WiFi network of the monitor to the WiFi configuration of the external device.

- 13 -

## **APP Monitoring Interface**

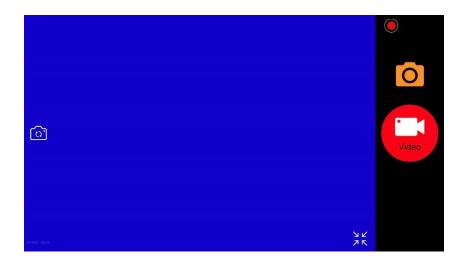

- Run RoadCam App, touch device to connect. After successful connection, it automatically jump to camera interface. You can take photo, recording, play and share.
- You also can change the WiFi name and password in RoadCam Setting.
- Save the photo and recording files to monitor.
- Enter into *Video*, play and download video locally.
- Enter into *Photo*, play and download photo locally.

- 14 -

## Charge

Push away the waterproof protective cover. Connect DC12V adapter with DC port, or connect Type-c port with USB-C adapter (user himself provided). During Charging, the indicator is on. When fully charged, the light turns off. It takes about 4 hours to fully charge.

## Firmware Upgrade

Before upgrade, please ensure power is >20% (1 grid). Copy upgrade file (Sigmastar Upgrade SD) to micro SD card. Power on, it will auto upgrade. It will auto turn off after upgrade. Unplug card to finish upgrade.

## Attention

1. Please use device under temperature between – 20 °C and 60°C. Excessive temperature will cause abnormal expansion, ignition and even explosion of the battery. Before using it under low temperature, it is recommended to fully charge under normal temperature to extend the life of battery.


2. Please place device in a proper position to prevent it from falling and breaking the screen.


3. This machine is dust-proof and rainproof. Please do not immerse the machine in water.

4. If you continue to use the micro SD card on this device after upgrade, please delete the upgrade files.

5. The default startup password is 8888.

## Data Port Pin Definition

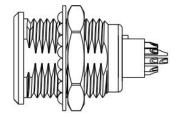

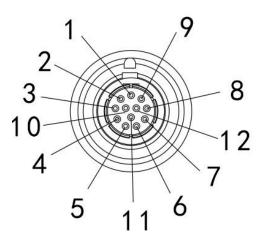

- 1. Video
- 2. LED control
- 3. Audio
- 4. Speaker+
- 5. Speaker-
- 6. NC
- 7. NC
- 8. NC
- 9. NC
- 10. +12V
- 11. GND
- 12. GND

- 16 -

 Display	10.1 inch		
Screen Resolution	1280*800 pix		
Touch screen	capacitive touch screen		
	4K(16:9): 3840x2160@25 /30fps		
	2K(4:3): 2560x1944@25 /30fps		
	2K(16:9): 2560x1440@25 /30fps		
	1080p(16:9): 1920X1080@25		
Video recording	/30fps		
	4K 25fps/30fps,		
	2K 25fps/30fps,		
	1080P 25fps/30fps,		
	720P 25fps/30fps,		
Video input	CVBS PAL, CVBS NTSC		
Video format	MP4		
Photo	12MP、8MP、4MP、2MP (JPG)		
Video Output (16: 9)	HDMI 1080P		
Compression mode	H. 265 video compression		
Audio input/output	1.0Vp-p (20Hz-20KHz)		
Speaker Output	1W		
Camera LED Control	PWN		
File System Support	FAT32		
Memory card	TF card 2GB-256GB		
	Chinese, English, German, French,		

- 17 -

## Specification

Voltage	DC :12V USB DC:5V		
WiFi Protocol	802.11 a/b		
WiFi Channel	2.4000-2.4835Ghz		
WiFi power	<16dBm		
Power Supply	DC 12V 2.5A		
Lithium battery	6200mAh/8.4V( 48Wh)		
capacity			
Maximum	15W		
charging power			
working hours	6-8 Hours		
Operating	-20°C to 50°C		
temperature			
Waterproof	IP65		
grade			
Size	L*W*H 30*19*1.8CM		
Weight	870g		

- 18 -



- 19 -