

Instructions for attaching ferrules to co-polymer rods




Tools Required:

Power drill
Rivet Gun
4mm 3/32" drill bit
Marker Pen
Rod, ferrules & rivets



1. Mark the ferrule location for rivet with a marker pen

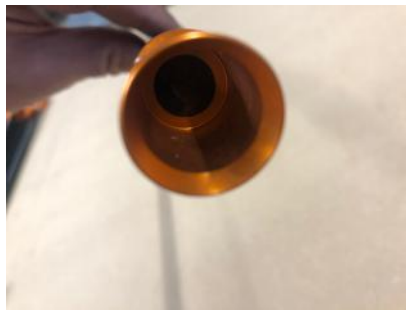

2. Ensure the copolymer rod is located flush within the ferrule and approximately 5mm 0.2" away from spring on male ferrule



3. With a sharp drill bit drill through ferrule and co polymer rod (note do not drill to other side of the ferrule. For ferrules with reducing sleeves drill through with sleeve in place)



4. Insert rivet



5. Using rivet gun to secure the ferrule to the rod



6. Repeat the process to secure the male ferrule